


24V Victron Internal BMS Wiring Diagram

Enduro Lithium Battery Bank | Internal BMS | 3kVA MultiPlus-II
Expandable Solar + Alternator Charging | Advanced Monitoring and Control

Download PDF and zoom in for details.



KEY	
VE. Direct	
VE. Bus/RJ45	
USB/HDMI	
Allow to Discharge	
Allow to Charge	
Ground	
Case Ground	
Chassis Ground	



Download the VictronConnect App for Bluetooth capabilities.



Note: This diagram is for training purposes only. Always follow manufacturer recommendations for battery bank sizing, and ensure solar array is properly sized based on system design considerations.